

User manual

SHARPENING INSTRUCTIONS:

1. Select the appropriate diamond side based on the condition of your blade.

Coarse 325 grit (45 micron) - Quick sharpening the dull & damaged blade or reset the edge on your knife blade or tool.


Extra fine 1200 grit (12 micron) - Honing

2. Place your blade on the heel of the diamond sharpener at the desired sharpening angle and **PUSH** the blade AWAY from you like you are trying to carve a thin slice off the top of the diamond surface. Push the knife blade across the sharpener as you push to sharpen the cutting edge all the way out to the tip of the blade (See Fig. 1). Repeat this **PUSHING** stroke several times. Remember to hold the angle as you push and try to maintain a consistent sharpening angle with each stroke. This is the key to obtaining the sharpest cutting edge.

3. Now sharpen the other side of the blade by placing your blade on the end of the diamond sharpener. **PULL** the blade TOWARD you like you are trying to carve a thin slice off the top of the diamond surface. As you pull the blade down the length of the diamond sharpener, pull the blade across the sharpener to sharpen the entire cutting edge. Let the tip come off the edge of the diamond sharpener. (See Fig. 2) Repeat this **PULLING** stroke the same number of times as you did on the opposite side of your blade and try to maintain a consistent sharpening angle with each stroke.

4. Continue sharpening both sides of your blade until you feel that your blade is truly sharp. If you started with Coarse 325 grit (45 micron) side, move to 1200 grit (12 micron) side, repeating the sharpening process. If your knife blade or tools to be sharpened merely need a touch-up or dressed edge, use only the 1200 grit (12 micron) side.

5. Thoroughly clean the diamond surface with water after use, and use a nylon scrub brush to clean the surface after some times using. This will remove metal particles that stick on the diamond surface during the sharpening process. **Always keep dry when store the diamond sharpener.**

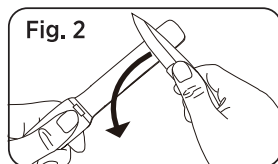

CAUTION: Sharpening is an inherently dangerous activity. Be alert and never attempt to sharpen if you do not have full command of your mental and physical facilities.

WARNINGS: This product is not a toy. Keep out of the reach of children.

- Watch its demo video on YouTube: bit.ly/121-Video

Or scan QR code

- SHARPAL products are guaranteed against defects in materials and workmanship for **3 years** from the purchase date. This warranty excludes damage from misuse or alteration, normal wear and tear, and the natural diminishment of consumable items from regular use. Additionally, the warranty is valid only for non-industrial and non-commercial usage. If you want to make a warranty claim, please contact us through SHARPAL website or send an email directly to warranty@sharpal.com.

